

ENERGY EFFICIENCY:

The following suggestions will help you protect the environment and save money on your electricity bills:

- Always switch lights off when not in use.
- You can often use a lower Wattage bulb than the maximum stated, e.g. if the maximum stated is 40W try using 25W etc.
- This product is suitable for use with low energy bulbs. Please use a low energy equivalent wherever possible.

REPLACEMENT LAMP TYPE:

Wattage: 40 Watt
Supply Voltage: 240 Volt
Size / Type: Candle lamp SES E14

EVENTUALLY, YOU MAY WANT TO REPLACE THIS LIGHT FITTING:

When your product comes to the end of its life or you choose to update or upgrade it by replacing it, please do not dispose of it with your normal household waste and please recycle where facilities exist. When you need to dispose of this fitting you can check with your retailer or local authority for suitable options. New regulations require the recycling of Waste from Electrical and Electronic Equipment (European "WEEE Directive" effective August 2005—UK WEEE Regulations effective 2nd January 2007). Environment Agency Registered Producer: WEE/GA0248QZ



IF YOU EXPERIENCE PROBLEMS:

If your product is defective or develops a fault, please return it to the place where you bought it. You can call our helpline for advice. The helpline will gladly give advice on any aspect of any Eterna Lighting product but may not be able to give specific instructions regarding individual installations.

If in doubt, consult a qualified electrician.

11-08-11BT



HELPLINE:


• T: 01933 673 144
• F: 01933 678 083
• E: sales@eterna-lighting.co.uk

Visit our website:

www.eterna-lighting.co.uk



SAFETY AND INSTALLATION INSTRUCTIONS

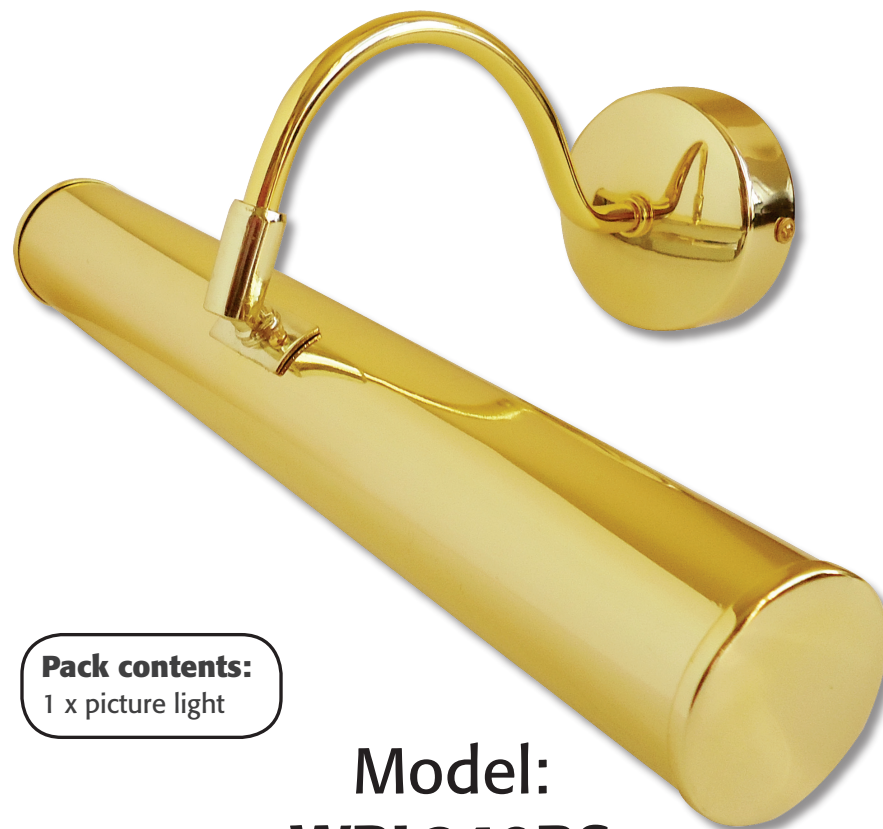

Pack contents:

1 x picture light

Model:
WPL240BS

Brass Effect Picture Light 2 x 40W

These instructions are provided as a guideline to assist you.

**PLEASE READ THESE INSTRUCTIONS BEFORE USING YOUR NEW FITTING
PLEASE RETAIN FOR FUTURE REFERENCE**

General Information & Cleaning:

READ THIS FIRST:

Check the pack and make sure you have all of the parts listed on the front of this booklet. If not, contact the outlet where you bought this product.

This product must be installed by a competent person in accordance with the current building and IEE wiring regulations.

As the buyer, installer and/or user of this product it is your own responsibility to ensure that this fitting is fit for the purpose for which you have intended it. Eterna Lighting cannot accept any liability for loss, damage or premature failure resulting from inappropriate use.

If in any doubt, consult a qualified electrician.

This product is designed and constructed according to the principles of the appropriate British Standard and is intended for normal domestic service. Using this fitting in any other environments may result in a shortened working life, for example where there is prolonged periods of use or higher than normal ambient temperatures such as lighting public or shared spaces or in care facilities.

Switch off the mains before commencing installation and remove the appropriate circuit fuse or lock off MCB.

The lamps supplied with this fitting are consumable parts and therefore may be outside of any warranty offered.

This unit is suitable for indoor use only.

This product is designed for permanent connection to fixed wiring: this must be a suitable circuit (protected with the appropriate MCB or fuse).

This product is suitable for installation on surfaces with normal flammability e.g. wood, plasterboard and masonry.

Before making fixing hole(s), check that there are no obstructions hidden beneath the mounting surface such as pipes or cables.

Make sure that the fixings are strong enough to support the considerable weight of the fitting and hold it rigidly.

The chosen location of your new fitting should allow for the product to be securely mounted (e.g. to a plastered wall) and safely connected to the mains supply (lighting circuit).

When choosing the location for your new fitting, ensure that the fixings will be anchored in a solid surface e.g. concrete, brick or a joist—do not fix directly onto panelling, cladding, plasterboard etc.

Do not attach to surfaces which are damp, freshly painted or otherwise electrically conductive (e.g. metallic surfaces).

When making connections ensure that the terminals are tightened securely and that no strands of wire protrude. Check that the terminals are tightened onto the bared conductors and not onto any insulation.

This product must be connected to earth termination.

WARNING: This product becomes hot!

This product is not intended to be used by children and persons with sensory, physical and/or mental impairments that would prevent them from using it safely.

Small children should be supervised to ensure that they do not play with this appliance.

You are advised at every stage of your installation to double-check any electrical connections you have made. After you have completed your installation there are electrical tests that should be carried out, these tests are specified in the current IEE wiring and building regulations. If in doubt, consult a qualified electrician.

CLEANING:


Clean this light fitting only with a soft dry cloth.

Do not use any chemical or abrasive cleaners.

Installation:

INSTALLATION:

- 1) Remove picture light from packaging.
- 2) Using the mounting bracket as a template mark the horizontal position of the fixing holes on the mounting surface. We recommend that you use a spirit level to ensure the bracket is horizontal.
- 3) Fit the bracket to the mounting surface with suitable screws and wall plugs (not supplied).
- 4) Connect the incoming mains supply cable to the fitting using the terminal block supplied and according to the markings.
- 5) Remove the 2 screws from the ends of the mounting brackets and keep to one side.
- 6) Fit picture light to the mounting bracket and secure with the 2 screws taking care not to trap any of the wiring.
- 7) Fit 2 x 40W max E14 SES candle lamps see fig. 1 below.

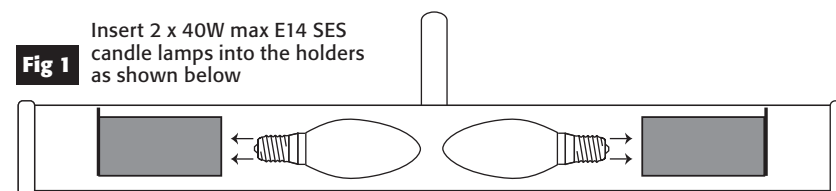

- 8) Adjust the picture light head to the desired position. (See fig. 2 below).
- 9) Restore the power and switch on.

