




**EH1357**  
**2 x 20W Insect Killer**

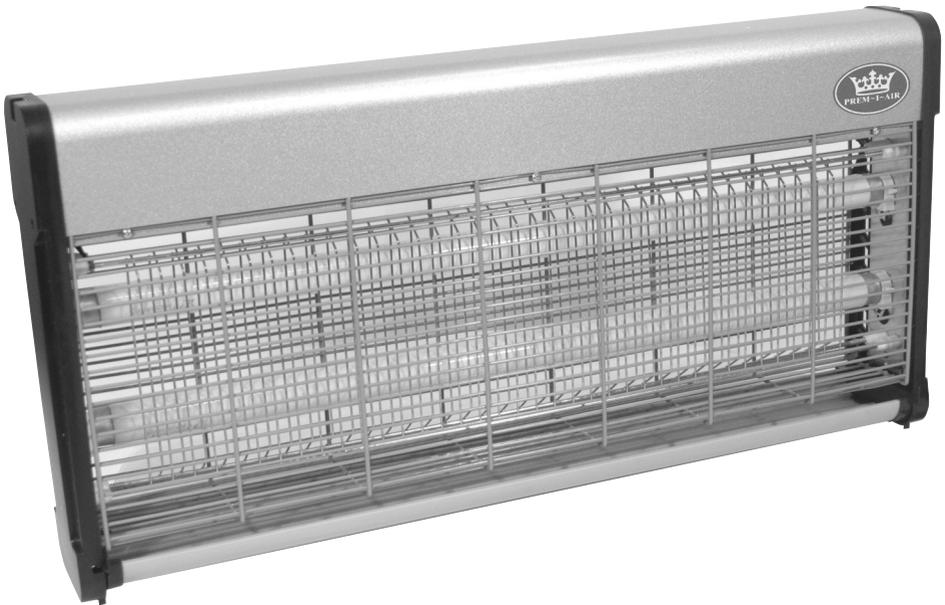

**User Manual**  
Please retain for future reference

# IMPORTANT

## Installer and Users please note:


These instructions should be read carefully and left with the user of the product for future reference. Before use please inspect the product including its cable and plug for any signs of damage. If the product is damaged, DO NOT use it, and contact your supplier immediately.

## PRODUCT SAFETY

- Children must not play with the appliance.
- Cleaning and user maintenance shall not be made by children without supervision.
- The appliance must be placed on a firm flat surface.
- Do not cover when in use.
- Do not attempt to open the main unit, there are no user serviceable parts inside.
- Do not use water to clean the unit. Cleaning should be carried out with a clean, dry brush or cloth.
- Do not insert any object between the grilles.


## OPERATING INSTRUCTIONS

1. Place the unit on a clean, level surface out of the reach of children. Make sure the unit is not placed in or near food preparation areas.
2. Make sure the power switch (A) on the side of the unit is in the off (o) position.
3. Connect the mains plug to a mains outlet.
4. Switch the unit on by moving the power switch (A) on the side of the unit to the on (I) position.

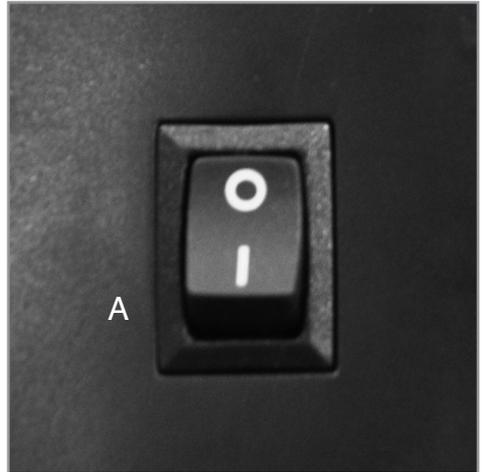


## HANGING INSTALLATION

1. Make sure the power switch (A) on the side of the unit is in the off (o) position.
2. Make sure that the intended hanging point is suitable before attaching the unit. The hanging point should not be in or near food preparation areas.
3. Raise the hanging points on either side of the unit (B) and attach the chain, making sure it is secure before mounting the unit.
4. Hang the centre point of the chain on to chosen hanging point.
5. Connect the mains plug to a mains outlet.
6. Switch the unit on by moving the power switch (A) on the side of the unit to the on (I) position.

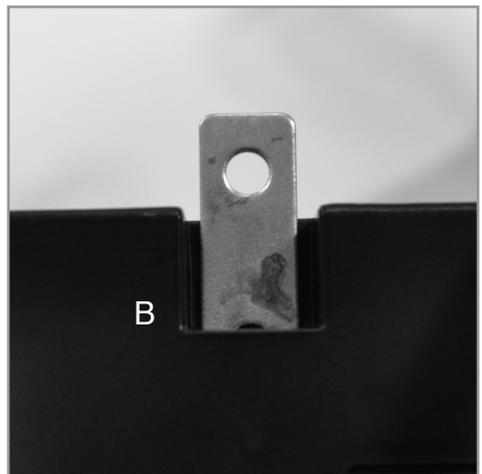





## CLEANING AND MAINTENANCE

1. Ensure that the unit is disconnected from the mains and the power switch (A) is in the off (o) position.
2. The unit should be cleaned gently with a clean, dry brush or cloth. Do not use water to clean the unit.
3. The collection tray should be removed and emptied periodically by pulling the tray tabs (C)

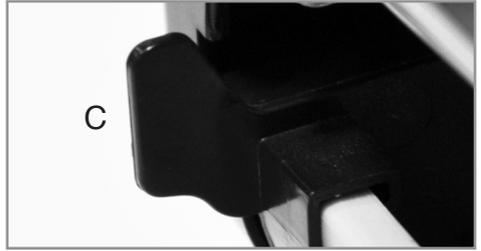


## REPLACING THE TUBES

1. Ensure that the unit is disconnected from the mains and the power switch (A) is in the off (o) position.
2. Lay the unit face down and remove the 2 small screws from the top of the grille (D).
3. Remove the 2 small screws from either side of the unit (E). Only remove the top 2 screws (those closest to you), the bottom 2 screws release the front grille.
4. Remove the rear grille.
5. Remove the tubes by turning them a quarter turn towards you and pushing them away from you (F).
6. Replace the lamps (with a 20W UV-A tube) by aligning the pins with the groove in the lamp holder (F) slotting them in and turning them a quarter turn away from you. This will lock the lamp in place.
7. Replace grille and re-insert screws, unless you need to change the starters also (see next page).

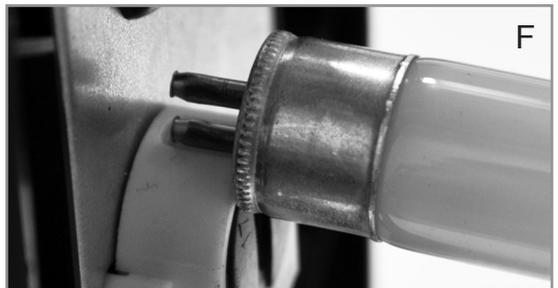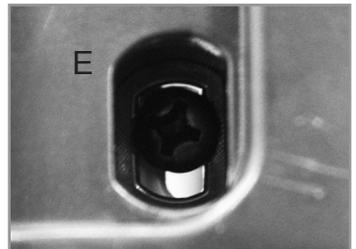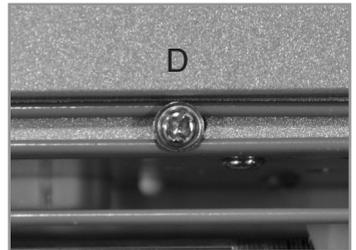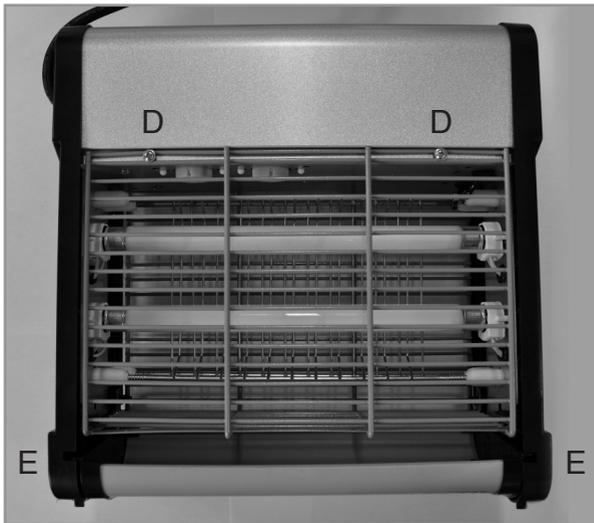

## REPLACING THE STARTERS

1. Ensure that the unit is disconnected from the mains and the power switch (A) is in the off (o) position.
2. Lay the unit face down and remove the 2 small screws from the top of the grille (D).
3. Remove the 2 small screws from either side of the unit (E). Only remove the top 2 screws (those closest to you), the bottom 2 screws release the front grille.
4. Remove the rear grille.
5. Remove the starters (G) by gently pushing them in and turning them a quarter turn anti-clockwise.
6. Replace the starters (with a 4-22W starter) by aligning the pins with the internal holder, pushing them in and turning a quarter turn clockwise. This will lock the starter in place.
7. Replace grille and re-insert screws.

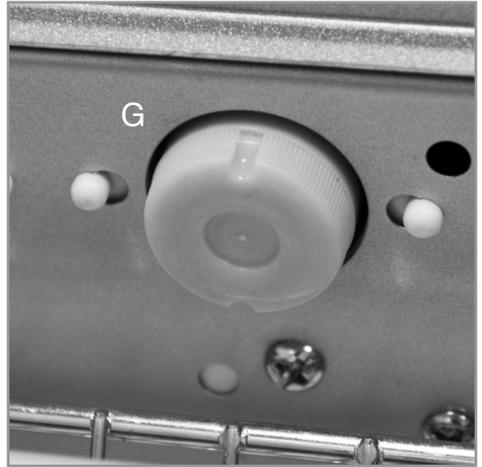

## TECHNICAL SPECIFICATION

Bulb Type .....	2 x 20W UV-A Tube (EH1357A)
Starter Type .....	4-22W (E910AA)
Coverage (sqm) .....	150
Frequency (Hz) .....	50
Grid Voltage (V) .....	2000
Power Consumption (W) .....	45
Protection Class .....	I
Voltage (V) .....	230

## SERVICE WARRANTY

Prem-i-Air guarantees the product free from defects in materials and workmanship for a period of twelve months.

Should this appliance be operated under conditions other than those recommended, at voltages other than the voltage indicated on the appliance, or any attempts made to service or modify the appliance, then the warranty will be rendered void.

The product you buy may sometimes differ slightly from illustrations. This warranty is in addition to, and does not affect, your statutory rights.

Our guarantee is administered by our retailers.

If your product arrives damaged, you must contact the retailer from whom you bought it. The retailer's contact details will be on the invoice that arrived with the product, or on the e-mail you received when you placed the order. Do not contact Prem-i-air, only your retailer can arrange a replacement.

If your product fails within the guarantee period and the product needs to be repaired or replaced, you must contact the retailer from whom you bought it.

The retailer's contact details will be on the invoice that arrived with the product, or on the e-mail you received when you placed the order.

If you have just received your product and require technical help in using it, please call our Help Desk on (0845) 459 4816

If you have any other technical queries about the product, please call our Help Desk on (0845) 459 4816.

Prem-i-Air Appliances Ltd.,  
Lancots Lane, Sutton,  
St. Helens, Merseyside.  
WA9 3EX