


Devireg 535



Setting up your Devireg 535 programmable thermostat with your devimat system

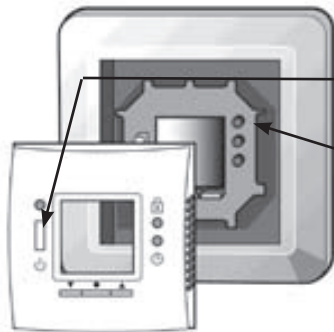

Selection of sensor type

Power on the thermostat

With the front off, with a small screwdriver or pencil press the installation button.




Select the floor sensor
To change the default setting, press ● and use the arrow buttons ▲▼ to select your choices. Press ● to accept your choice.
Press ▲ for the next setting.



Maximum floor temperature.
- Tiles on timber based floor = 29°C
- Tiles on concrete based floor = 40°C
- Timber covered floors = 27°C (parquet etc. - Please check with floor supplier).


To change this setting, press ● and use the arrow buttons ▲▼ to select your choice. Press ● to accept your choice.

Press ▲ for the next setting.

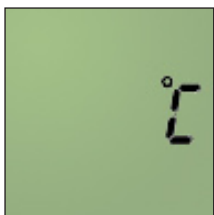

Scale
When selecting Celsius, the display will show the actual temperature at the floor sensor.
To change this setting, press ● and use the arrow buttons ▲▼ to select your choice.
Press ● to accept your choice.

The installation procedure is now finished.
You can use the ▲▼ for going back or forward through the settings, otherwise:

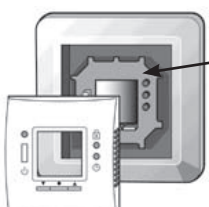


Press the installation pinhole to exit installation mode.

Put the frame and front back on.





You enter the settings by pressing the pinhole with a small screw driver, pencil, the display now changes from temperature to time display.

Setting the time

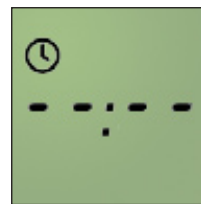

By pressing the ●, the hours starts flashing - you can now change them with the ▲▼.
Press the ● again to change the minutes with the ▲▼.
To finish, press ● then ▲

Setting the weekday

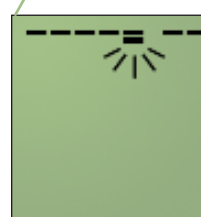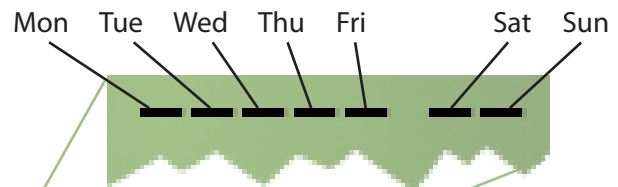

By pressing the ●, the weekday starts flashing - you can now change them with the ▲▼.
Press the ● to accept.
To finish press ▲

Setting the timer periods



The first period bar flashes indicating this is the morning period. By pressing the ●, the start time of the period starts flashing. You can change it with the arrow buttons ▲▼ in increments of 15 minutes.

Press the ● to accept.



The second (day), third (evening) and fourth (night) period bars are set as mentioned above.

Setting the comfort temperature



By pressing the ●, the preset comfort temperature starts flashing.

You can change it with the arrow buttons ▲▼

Press ● to accept, then press ▲

Setting the set back temperature (second and fourth period)



By pressing the ●, the preset comfort temperature starts flashing, normally this is set to OFF.

You can change it with the arrow buttons ▲▼

Press ● to accept.



Then press the pinhole with a small screwdriver or pencil.

Changing timer program



To change the program:

Keep the ● button pressed for 2 seconds.

The actual program starts to flash. It is now possible to change the program by using the buttons ▲▼ Press the ● to accept.



P1 - Manual mode

On constantly 24 hours 7 days a week at set temperature.



P2

Set temperature - twice a day.



P3

Set temperature all day.



P4

Set temperature Monday - Friday twice a day.
Saturday - Sunday all day.