

HNA/102LR 'QUICK' START INSTRUCTIONS

The following instructions relate to Keypad supplied from new only.

The Keypad enables up to 100 user codes to be assigned to open Door 1 or 2.

At time of first installation, 2 codes are already pre-assigned for this purpose, additionally a Master/Engineer code is assigned.

If you simply wish to change these pre-assigned codes to your users preferred codes, follow strictly as set out below.

NOTE:

WHEN USING A 5 DIGIT CODE - THE MAXIMUM USEABLE No. IS 65535, THUS YOU CANNOT USE eg. 98765 or 99999 etc.

**Once powered up, Press Keys 1 & 3 Absolutely Simultaneously -
A long tone must be heard. Then enter Master code 12345
Top Green Led should now be Pulsing.**

Door 1 Code is
currently 2580

Door 2 Code is
currently 3690

Master Code is
Currently 12345

To change this:

To change this:

To change this:

Enter - 04
Enter - 2580
Enter - 03
Enter - 1
Enter - xxxx (new code)
Enter - 99
New code must
be 4 digits only

Enter - 04
Enter - 3690
Enter - 03
Enter - 2
Enter - xxxx (new code)
Enter - 99
New code must
be 4 digits only

Enter - 01
Enter - xxxxx (new code)
Enter - 99
New Code must be 5 digits
only and cannot exceed 65535.
Always use this new Master code
to enter the Engineer programming
mode.

If you input a digit in the wrong place or get lost in the programming, we suggest you enter 99 three times. This should exit you from the program mode (Green LED not pulsing). Start again from 1 & 3 simultaneously.

If the long tone is heard after 1 & 3, but 12345 does not start the Green LED pulsing, this suggests the Master Code 12345 has been changed. Consult Bpt. on: 01442 230800 Tech. Support.