



01

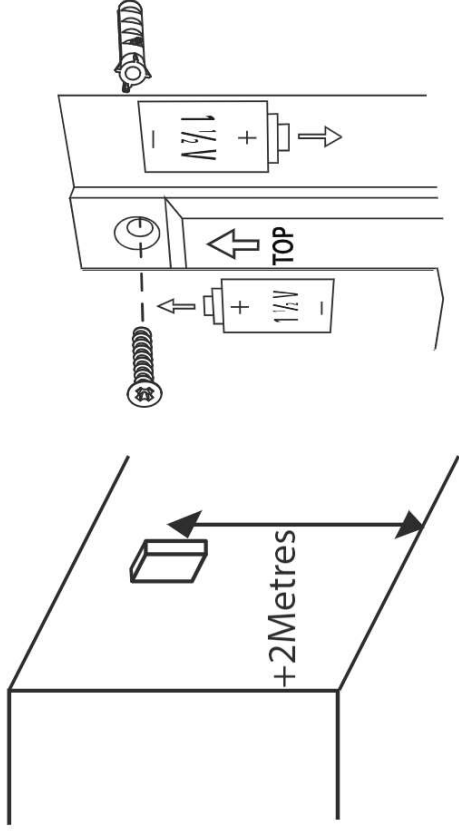



02a

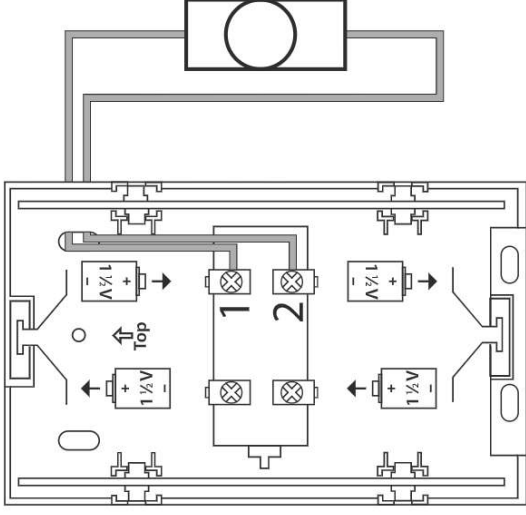

02b



02c

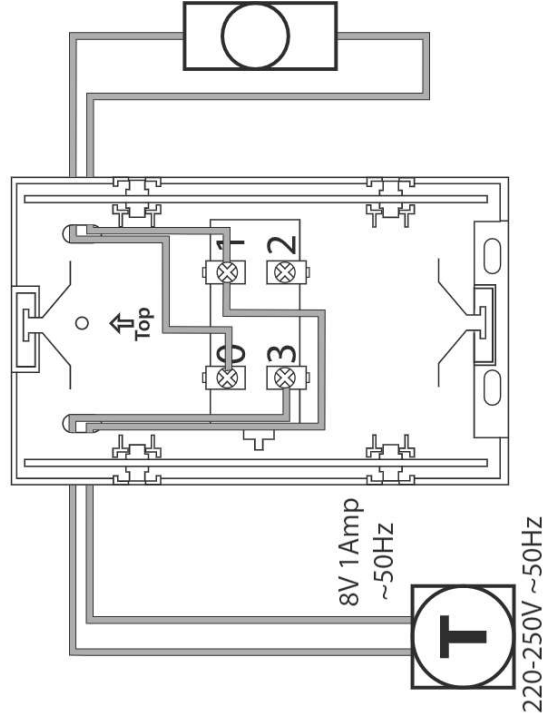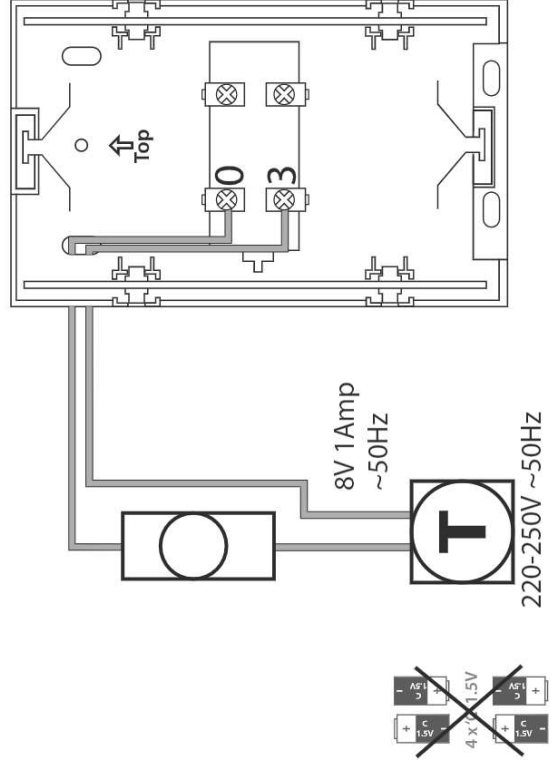

Safety

- ✓ The ventilation should not be impeded by covering the ventilation openings with items, such as newspapers, tablecloths, curtains, etc...
- ✓ **DO NOT allow this product to come into direct contact with heat or a naked flame.**
- ✓ The normal operation of the product may be disturbed by strong electromagnetic interference.
- ✓ This equipment is intended for domestic use only
- ✓ The appliance shall not be exposed to dripping or splashing
- ✓ No objects filled with liquids, such as vases, shall be placed on the appliance.
- ✓ Keep a minimum distance of 10 cm around the product for sufficient ventilation.
- ✓ Ensure the bell push is not mounted where it could become immersed by water/rain.
- ✓ DO NOT allow children to play with this appliance.

Battery Warnings

- ✓ An adult must carry out battery replacement and installation.
- ✓ Remove exhausted batteries from this product
- ✓ **DO NOT dispose of batteries in a fire, batteries may explode or leak.**
- ✓ DO NOT short-circuit the battery terminals.
- ✓ DO NOT mix used and new batteries.
- ✓ DO NOT mix alkaline standard (carbon-zinc), lithium or rechargeable batteries.
- ✓ DO NOT use rechargeable batteries in this product.
- ✓ DO NOT recharge non-rechargeable batteries.
- ✓ **DO NOT allow any part to come in contact with heat or a direct flame.**
- ✓ DO NOT allow water to come into contact with the batteries or wiring.
- ✓ Install carefully to prevent any damage to the batteries
- ✓ When installing batteries in the battery compartments, ensure the batteries are placed as marked (+)(-).
- ✓ Only the recommended batteries should be used.
- ✓ Remove batteries from product when not in use for long periods of time.
- ✓ Keep this product out of the reach of small children.
- ✓ Store unused batteries in their original packaging.
- ✓ Dispose of used batteries responsibly.

Technical Specifications

Wired Door Chime Kit: 765
Power : 4 x C/LR14 1.5V Batteries
Bell Wire: 5 Metres Included
Max Length: 20M using Battery or 8V Transformer.
Indoor Use Only
Brass finish Bell Push



smartwares [®] s a f e t y & l i g h t i n g		CUSTOMER SERVICE	
NL : 0900-2088688	Local brief	NL : 0900-2088688	Local brief
BE : 070-533031 (NLI) Local brief		BE : 070-533031 (NLI) Local brief	
FR : 0800-97570 (FBI) Gratuit		FR : 0800-97570 (FBI) Gratuit	
DE : +49 (0) 1805 010762	15ct/min	DE : +49 (0) 1805 010762	15ct/min
5015 BH Tilburg	14Ct/Min. dt. Festnetz,	5015 BH Tilburg	14Ct/Min. dt. Festnetz,
The Netherlands	Mobil max. 42Ct/Min	The Netherlands	Mobil max. 42Ct/Min
UK : +44 (0) 345 230 1231		UK : +44 (0) 345 230 1231	
ES : +34 938427589		ES : +34 938427589	
WWW.SMARTWARES.EU			

Recycling

This symbol is known as the 'Crossed-out Wheelie Bin Symbol'. When this symbol is marked on a product or battery, it means that it should not be disposed of with your general household waste. Some chemicals contained within electrical/electronic products or batteries can be harmful to health and the environment. Only dispose of electrical/electronic/battery items in separate collection schemes, which cater for the recovery and recycling of materials contained within. Your co-operation is vital to ensure the success of these schemes and for the protection of the environment

