

## **Installation & Operating Instructions**




## Remote 3hr Emergency Pack (-01 & -0J formats)

PART CODE: LED3EP80

The LED3EP80 is available in two formats, with '-01' OR '-0J' suffix.


**-01 suffix** is suitable for direct connection to LuxPanels and LBDLXXX Commercial Downlights that have a Female connector, with the Male connector from the driver

**-0J suffix** is suitable for direct connection to LuxPanels and LBDLXXX Commercial Downlights that have a Male connector, with the Female connector from the driver

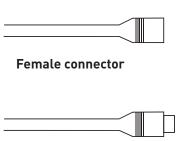

Male connector

## LED3EP80 packaging

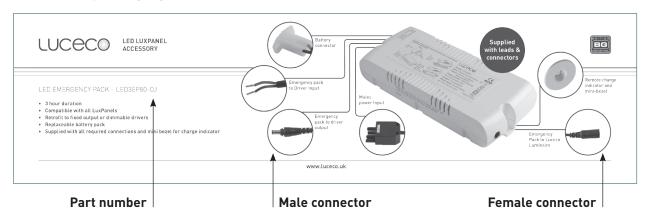

## Installation of LED3EP80 with a LuxPanel or Commercial Downlight

It is also possible to connect a LuxPanel or Commercial Downlight with a Female connector (Male from the driver to a -OJ Emergency pack (LED3EP80-OJ)) by using adaptors to change Male/Female

- 1. Live/Neutral to input of Driver
- 2. Output of driver to inverter
- 3. LED luminaire input
- 4. Indicator light
- 5. Connect Battery
- 6. Mains input
- 7. Fit **LPFAB-01** to connection 2
- 8. Fit LPMAB-01 to connection 3
- 9. This now transforms a LED3EP80-01 into a LED3EP80-0J
- 10. To convert LED3EP80-0J into LED3EP80-01, fit LPFAB-01 to connection 3 and LPMAB-01 to connection 2





LPFAB-01

LPMAB-01

Tech Help Line

UK - **0845 194 7584** 

Non UK - +44 (0)1952 238 100

Supplied by BG Electrical Ltd Stafford Park 1 TF3 3BD ENGLAND

Visit our website at

www.luceco.co