



Instructions for : Grid Range Rocker Switch Assembly


AR1623 Ed C

Ultimate

PLEASE READ THE FULL INSTRUCTIONS PRIOR TO ASSEMBLE

1. Before starting to fit the rocker cap to the switch base check that the colours/styles are correct for your requirement.
2. Place the switch base on a flat surface (sideways) with wording face down and the 'Schneider Electric' logo to the left side of the base. (See Fig 1)


Fig. 1

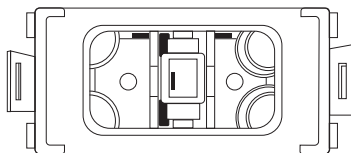

3. The base unit will have the centre square pocket angled to either the right or left of the switch centre. Before pushing the rocker cap into place, the centre spigot should be lined up with the base pocket at the same angle. (See Fig 2)


IMPORTANT: If the rocker cap has wording i.e. 'Washing machine'. This must be fitted to the opposite end of the switch marked to that of the 'Schneider Electric' logo.

Fig. 2

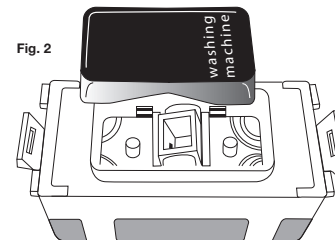

4. When both are lined up at the same angle push the rocker cap downwards using two fingers to steady the cap as it's pushed down. As the spigot engages in the base pocket a 'click' will be heard. (See Fig 3)

Fig. 3

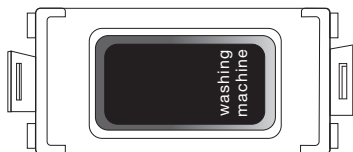

5. To check the unit is correctly assembled move assembled rocker in a see/saw motion. Each time the direction is changed a click should again be heard.
6. The completed switch should now be fitted as standard Instructions.

International Customer Care Centre Numbers

Saudi Arabia	+966 920011101
Cyprus	+357 24812649
Iraq	+962 65166260
Jordan	+962 65166465
Lebanon	+961 1321645
Hong Kong	+852 2579 9699
Nigeria	+234 (0)14483381
UAE/Pakistan/Yemen	+971 4 7099333
Bahrain	+973 17 213277
Kuwait	+965 22494604
Oman	800 73666
Qatar	+974 44553010
UK	+44 (0)70 608 8608

Schneider Electric Ltd,
Stafford Park 5, Telford, Shropshire TF3 3BL, UK
www.schneider-electric.com