
ELNUR CONNECTED




Pairing the ECRSTAT with the ECAR receiver or multiple receivers.

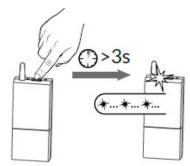

Press and hold the receiver button for 3 seconds until the LED flashes.



Press and hold the 2nd button from the left for 5 seconds again until rF01 is displayed.

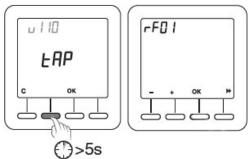


The display will now show the number of receivers found.


Press the **OK** button to continue.




Press and hold the 2nd button from the left for 5 seconds until **tAP** is displayed.

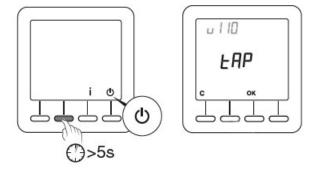

Press and release the **OK** button. The thermostat searches for the receivers to associate. The number of receivers found and associated is displayed is the centre P00, P01, P02, etc.

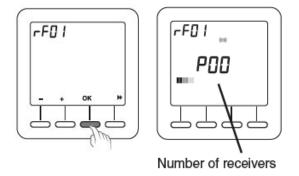

Enter the watts of the unit that the receiver is attached to by pressing the + button. Once finished press the **OK** button. Repeat for every receiver.

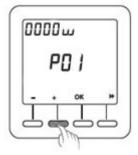

To add more receivers to the same ECPRSTAT repeat the above steps. To connect the receivers to the gateway for use with the APP please refer to our gateway guide.