
LED LAMP SPECIFICATIONS		
Lumens total flux	900 lm	
Rated Wattage	11.2W	
Rated luminous flux	900 lm	
Nominal life time of the lamp	30,000 hrs	
Colour temperature	6500K	
Number of switching cycles before premature lamp failure	≥15,000	
Warm-up time up to 60 % of the full light output	Instant full light	
Dimmable	No	
Nominal beam angle	120°	
Rated power	11.2W	
Rated lamp lifetime	30,000 hrs	
Lamp power factor	>0.5	
Lumen maintenance factor at end of nominal life	>80%	
Starting time	<0.5s	
Colour rendering	≥80	
Colour consistency	Within 6 step Macadam ellipse	
Rated peak intensity	230cd	
Rated beam angle	120°	
Voltage	240V	
Not suitable for accen	t lighting	

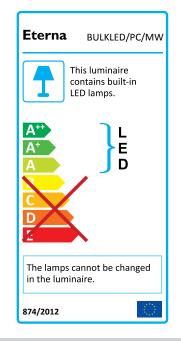

#### LAMP REPLACEMENT:

The light source is designed to last the lifetime of the luminaire.

The light source contained in this luminaire shall only be replaced by the manufacturer, service agent or a similar qualified person.

CAUTION, RISK OF ELECTRIC SHOCK.



Made in China

## **EVENTUALLY, YOU MAY WANT TO REPLACE THIS PRODUCT:**

Regulations require the recycling of Waste from Electrical and Electronic Equipment (European "WEEE Directive" effective August 2005—UK WEEE Regulations effective 2nd January 2007). Environment Agency Registered Producer: WEE/GA0248QZ.

WHEN YOUR PRODUCT COMES TO THE END OF ITS LIFE OR YOU CHOOSE TO REPLACE IT, PLEASE RECYCLE IT WHERE FACILITIES EXIST - DO NOT DISPOSE WITH HOUSEHOLD WASTE.

#### **CLEANING:**

Clean this light fitting only with a soft dry cloth.

Do not use any chemical or abrasive cleaners.

#### IF YOU EXPERIENCE PROBLEMS:

If you believe your product is defective, please return it to the place where you bought it. Our Technical Team will gladly advise on any Eterna Lighting product, but may not be able to give specific instructions regarding individual installations.




Email: sales@eterna-lighting.co.uk / technical@eterna-lighting.co.uk

Visit our website: www.eterna-lighting.co.uk



## **INSTALLATION INSTRUCTIONS**

## A guide for qualified electricians

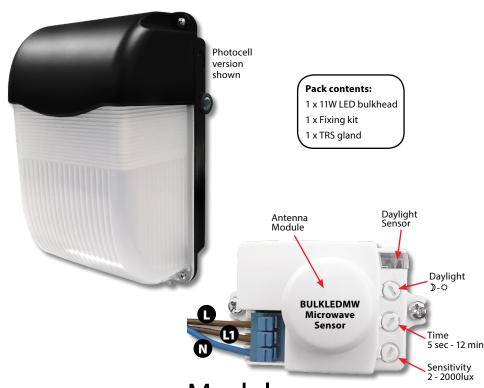

# Model:

## **BULKLED / BULKLEDPC / BULKLEDMW**

11W IP65 LED Bulkhead / With Photocell / With Microwave Sensor

These instructions are provided as a guideline to assist you.

PLEASE READ THESE INSTRUCTIONS BEFORE INSTALLATION AND RETAIN FOR FUTURE REFERENCE

#### **READ THIS FIRST:**

Check the pack and make sure you have all of the parts listed on the front of this booklet. If not, contact the outlet where you bought this product.

This product must be installed by a competent person in accordance with the current building and IEE wiring regulations.

As the buyer, installer and/or user of this product it is your own responsibility to ensure that this fitting is fit for the purpose for which you have intended it. Eterna Lighting cannot accept any liability for loss, damage or premature failure resulting from inappropriate use.

This product is designed and constructed according to the principles of the appropriate British Standard and is intended for normal domestic service. Using this fitting in any other environments may result in a shortened working life

Switch off the mains before commencing installation and remove the appropriate circuit fuse or lock off MCB.

This unit is suitable for outdoor use.

This product is designed for permanent connection to fixed wiring: this must be a suitable circuit (protected with the appropriate MCB or fuse).

This product is suitable for installation on surfaces with normal flammability e.g. wood, plasterboard and masonry. It is not suitable for use on highly flammable surfaces (e.g. polystyrene, textiles).

Before making fixing hole(s), check that there are no obstructions hidden beneath the mounting surface such as pipes or cables.

The chosen location of your new fitting should allow for the product to be securely mounted and safely connected to the mains supply (lighting circuit).

When making connections ensure that the terminals are tightened securely and that no strands of wire protrude. Check that the terminals are tightened onto the bared conductors and not onto any insulation.

This fitting is double insulated; do not connect any part to earth.

This product is not intended to be used by children and persons with sensory, physical and/or mental impairments that would prevent them from using it safely.

# IMPORTANT: ALWAYS SWITCH OFF CIRCUIT BEFORE COMMENCING INSTALLATION OR MAINTENANCE.

You are advised at every stage of your installation to double-check any electrical connections you have made. After you have completed your installation there are electrical tests that should be carried out, these tests are specified in the current IEE wiring and building regulations.

### PHOTOCELL VERSION:

Do not install under eaves or in a location of frequent shadow that will prevent the light from switching off when required. Do not install near other sources of bright light that will prevent the light from switching on when the ambient light level falls.

#### INSTALLATION:

**IMPORTANT**: Fitting must be installed vertically with black diffuser housing at top. (See fig.1 opposite).

- 01) Choose the location for your new light fitting giving consideration to the points listed opposite.
- 02) To access the fitting, remove the four retaining screws and lower the hinged diffuser.
- 03) Drill out four fixing holes in the back of the fitting, according to your chosen fixing method. All four blind holes are pre-cast within the feet bosses. This enables the fitting to be mounted securely to a solid surface.
- 04) Choose the point for cable entry and remove (with care) the corresponding cable entry using a 20mm. hole saw. (See fig. 2 opposite). **DO NOT USE A HAMMER.**
- 05) Using the fitting as a template, mark the location of your fixing holes on the mounting surface.
- 06) Secure the fitting into position using suitable screws and washers (fixings not supplied).
- 07) Cover the heads of the screws with silicone sealant (not supplied), to maintain IP rating.
- 08) Insert an IP rated grommet or an IP65 cable gland and lock into position.
- 09) Thread the supply cable into the fitting. If entry is in the rear of the fitting, there is a pre-cast cable groove so the wire can be routed to the cable entry hole.
- 10) Restrain cable using the cable clamp and make electrical connections.
- 11) Re-affix diffuser and tighten the four screws taking care not to over tighten, as this may damage the unit.
- 12) Restore power and switch on.

#### **BULKLED**


The fitting should light when switched on.

#### **BULKLEDPC**

The fitting will light when the power has been restored and the ambient light level falls below the preset threshold on the photocell (note this unit is not adjustable).






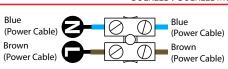

#### **BULKLEDPC**

**BULKLED / BULKLEDMW** 

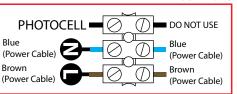

## BULKLEDMW - UNDERSTANDING THE SETTINGS: (SEE PG 1 FOR MW DIAGRAM)

Bulkhead mounting height 2.5m

#### SENSITIVITY / DETECTING

Turn the screw completely anti-clockwise direction to select minimum detection distance (approx 1m radius), and turn sensitivity screw completely in a clockwise direction to select the maximum detection distance (approx 10m radius).

### TIME SETTINGS

The light can be set to stay ON for any period of time between approx 5sec (dial screw turned fully anticlockwise) and a maximum of 12min (dial turned fully clockwise). Any movement detected during the "on" time will reset the timer.

The LED indicator will flash when adjusting the time setting dial.

The number of flashes means the following:

Flashes	Time	
1	5 secs	
2	15 secs	
3	30 secs	
4	60 secs	
5	2 mins	

Flashes	Time
6	4 mins
7	6 mins
8	8 mins
9	10 mins
10	12 mins

**NOTE:** after the light switches off, it takes approx 1 sec before it is able to start detecting movement again. The light will only switch on in response to movement once this period has elapsed.

#### LUX CONTROL SETTING

Turn the Lux setting screw fully anti-clockwise to select dusk to-dawn operation at approx 2 Lux.

Turn the Lux screw fully clockwise to select daylight operation at approx 2000lux.

#### **SETTING THE UP THE FITTING**

Turn the Lux setting screw fully clockwise so fitting will work in daylight, and set the time screw to minimum setting you can then carry out the walk test when adjusting the sensitivity/detection screw for the required detection area, once set you can re-adjust the Lux /time screw to the desired setting.

# MICROWAVE SENSOR TECHNICAL SPECIFICATIONS:

Power Supply 220-240Vac Power Frequency 50/60Hz

Hf System 5.8GHz CW Radar, ISM Band

Transmission Power <10mW Rated Load: 1200W Max.

Detection Angle 360°

Reach: 1-10m (Radii.), Adjustable

Time Setting 5 Sec to 12 Min Light Control 2~2000LUX

## **RED DIRECTIVE**

Eterna Lighting Ltd

**Microwave Occupancy Sensor** 

Full declaration available at www.eterna-lighting.co.uk